

# EASYSSTEER AUTOMATIC POWER STEERING CONTROLLER INSTALL GUIDE

THESE INSTRUCTIONS ARE A GUIDE TO CONNECTING THE STEERING CONTROLLER , PLEASE FOLLOW THEM STEP BY STEP AND MAKE SURE YOU PUT THE CONTROLLER AND STEERING ECU ARE IN AN AREA FREE FROM MOISTURE OR WATER INGRESS

- STEP 1 connect the 2 heavy duty cables from the ECU in socket B ( black to - earth , red to +12v direct feed ie battery or starter) inline on the red wire you must use the maxi fuse holder ( cut the loop and connect ) please don't inset the fuse just yet
- STEP 2 connect the white plug from the steering controller into socket C
- STEP 3 connect the white wire from the steering controller to - earth
- STEP 4 connect the black wire to a switched ignition +12v ( live with ignition ) use the 5amp fuse and holder inline
- STEP 5 join the purple wire from the black box to the yellow wire inside the long multi core wire coming from the angle sensor it has a black outter .it plugs into socket D ( best to cut into the yellow and solder the purple to it )
- STEP 6 connect the motor into socket A (B series) or D (T series)
- STEP 7 connect the angle sensor ( black multi plug ) to socket D
- STEP 8 fit the led ( optional ) orange to orange and pink to - earth
- STEP 9 insert the 40amp large fuse, switch the ignition on ( listen for a relay click from the steering ECU )
- STEP 10 please double check all connections and crimped terminals and now its ready to test

B SERIES ECU

T SERIES ECU



IF YOU EXPERIENCE ANY PROBLEMS DURING THE WIRING SIDE OF THE INSTALL PLEASE CHECK OUT OUR YOUTUBE HELP VIDEO, GO TO YOUTUBE AND SEARCH " EASYSTEER HELP " ALSO THERES MORE INFO ON [WWW.EASYSTEER.CO.UK](http://WWW.EASYSTEER.CO.UK)